

ASL NAVIGATOR VE2 GPS FIRMWARE UPDATE PROCEDURE V2


1. Once ASLVE2_GPSFirmware has been downloaded please unzip the 4 files to the Root of a Spare EMPTY SD CARD. Do **NOT** use the ASL Navigation Map Software Card.
2. Locate Navigation Module, ensure Keys are **NOT** in the ignition and stereo is **NOT** on.
(There should be **NO** red light on Navigation Module after waiting approximately 30 seconds.)
3. Remove the ASL Navigator Map Navigation software from the Navigation module.



4. Insert SD Card with GPS Firmware Update program (4 files) into Navigation module.



5. Insert keys into ignition and switch keys to ACC position and press 'NAV' button on steering wheel.
6. The GPS should go into update firmware mode after around 10 seconds and the following screen will be displayed. When Update progress= 100 the Firmware Update is successful.

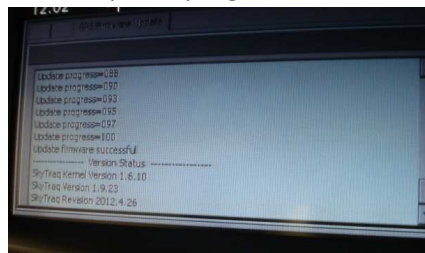

7. While stereo is still ON remove SD Card with GPS Firmware Update and reinsert GPS Navigation Software. Navigation Module will RESET and Map will start to load as normal.
(If Screen distorts press radio button on stereo and then 'NAV' button on steering wheel.)
8. UPDATE PROCEDURE IS COMPLETED.