


VE SERIES 2 ASL NAVIGATOR NAVIGATION MODULE LOCATION

1. ASL Navigator Module is located to the left of the drivers side footwell behind panel.
2. Remove Lock Clip by removing center lock pin and removing clip.

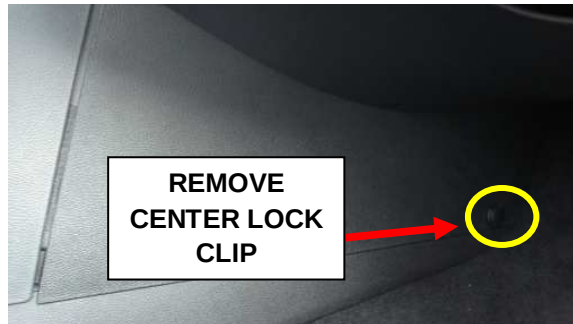

3. Pull right hand center console lower panel down (This will unclip).



4. Pull upper panel out by grasping at the two points and unclipping.



5. ASL Navigation Module is located at this point.

